

Axner Slab Roller

30" Package w/table #A333925

www.**axner**.com
pottery supply
a trademark of Laguna Clay Company

Operation Manual and Parts List

ENCLOSED - 4 Cartons and 1 box

Carton # 1 - Table Frame

(4-legs, 2-side rails with latches, 2-end rails, 2mounting brackets)

Carton #2 - (Rolls System) Slab Rolling Unit, Canvas, hardware, wrenches, allen wrench, screwdriver and Box #1

Carton #3 - Tabletop

Carton #4 - (Handles) Wagon Wheel and Crank Handle

Box #1 - 2 -Adjusting Wheels, 2 - Handles, 2 - Screws, washers and steel wedge

Box #1 is Enclosed in carton #2




IMPORTANT:


Before using **read carefully** the contents of this Operation Manual in order to maintain the equipment in good working condition at all times and to **avoid possible danger** because of negligence.

Step 1 - Open Carton #1 and #2

Assemble the 4 Legs to Side and End Rails (note end rails are assymetrical Install right side up) with M10 x 20 Cap Screws with washers, lock rings and M IO Hex Nuts (A) from carton #2.

Mount Slab Roller Bracket onto Side Rails by putting the MIO x 20 Cap Screw with washer in from the face and af-fixing it snugly with the lock washer and MIO Hex Nut on the back. When all screws are in place tighten firmly.

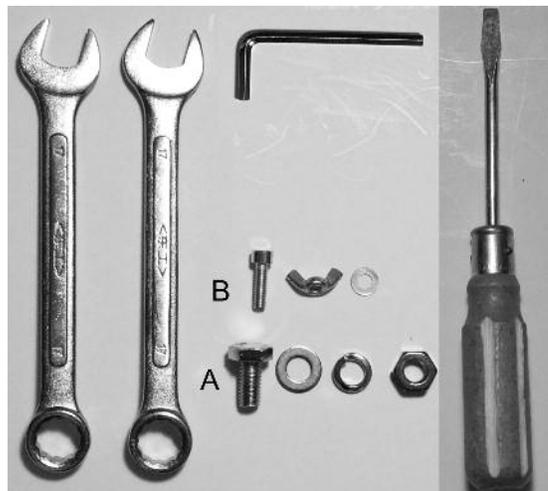

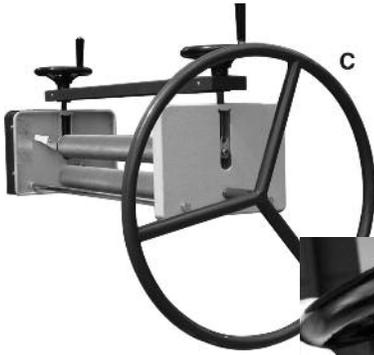

Step 2 - Open Carton #2

Place the Slab Rolling Unit onto the frame and screw on with the M6 x 20 Socket Head Cap Screw and Wing Nut (B). Place Adjusting Wheels onto the Adjusting Shaft of the Roller Unit and tighten with Wrench. Place steel key into square key way, cover with washer and tighten with screw. Screw handle to top of wheel.



Step 3 - Open Carton #3

The table top clip latches are attached using the M5 x 30 Flathead Socket Cap Screws and the M5 Wing Nuts. Be sure to adjust table tops so they do not contact the rollers. Clip the Latches to the Frame Lips. (Note lifting unit by table tops may break latches, grasp leg assembly when moving unit.)



Step 4 - Open Carton #4

Using either the Wagon Wheel or the optional Crank Handle (your choice), loosen the Set Screw on the Wagon Wheel (or Crank Handle) and put on the Shaft. Then Tighten the Set Screw.



OPERATING INSTRUCTIONS:

Note: Move slab roller into place by grasping leg assembly. Grasping table top may break clip latches.

- 1) Raise the Upper Roller's Height by using the Adjusting Handles on the unit
- 2) Take out the Canvas from Carton #2 and lay it out on one side of the tabletop
- 3) Place a piece of clay on the canvas and press the clay with your palm to reduce some of the thickness
- 4) Cover the clay with the rest of the canvas and push the folded canvas edge into the rollers. Use the handles to select the thickness and then turn the Wagon Wheel (or Crank Handle) to pass the clay through the Slab Rollers

Axner Slab Roller 3-2012

Axner PotterySupply 490 Kane Court, Oviedo, Florida 32765
(800) 843-7057 www.axner.com Fax (407) 365-5573