




Axner Wheel Bracket: Assembly Instructions

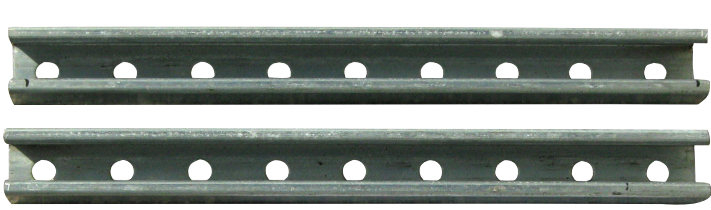

Wheel Bracket hardware (image A):

- (2) Metal Brackets
- (6) 3/8" x 1" Bolts
- (6) 3/8" Nuts
- (6) 3/8" Lock Washers
- (6) 3/8" Flat Washers





2) Place your Axner Wheel on its flat end. Remove the four screws holding the Bottom Cover and remove the cover from the wheel (image B).

3) Place your Axner Wheel back on all three legs. On the front plate, remove the plastic plugs in the six holes (image C).

4) Align a Bracket with a row of three holes and place a Bolt and Flat Washer through one of the holes. On the inner side of the wheel's front plate, secure the Bolt with a Lock Washer and a Nut. Repeat for the other two holes on this Bracket and then repeat this step for the second Bracket (image D).

5) Securely tighten all Nuts and Bolts (image E).

6) Put the Bottom Cover back in place and tighten the screws to protect the wheel.

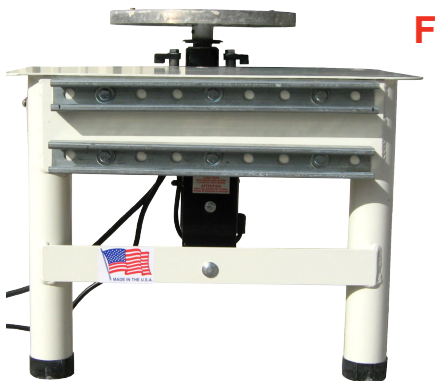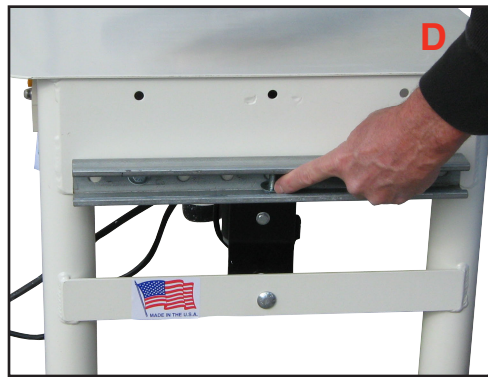

With your Axner Wheel Bracket properly assembled (image F), you're now ready to install an Axner Power Arm (image G).

Note: Axner Power Arm sold separately.



490 Kane Ct., Oviedo FL 32765 | P.O. Box 621484, Oviedo FL 32762

800-843-7057 or 407-365-2600 | www.axner.com

Axner is a trade name of Laguna Clay Company.